



Astro C2

User Manual

V1.0

Foreword

Thank you for choosing the **Astro C2** wireless high-definition video transmission system. The product adopts the newly developed HEVO 2.0 wireless transmission technology, achieving a seamless frequency hopping and ultra-low latency video transmission.



Scan the QR code to get more
details of the User Manual

Key Features


■ Key Features

- Supports one receiver connected to up to two transmitters
- The latest self-developed HEVO 2.0 wireless transmission technology provides ultra-high stability and seamless frequency hopping
- Ultra-low latency, as low as 33ms (1080P60 *)
- Supports 3280ft(1000m) wireless transmission range
- Transmitter supports HDMI IN, SDI IN, and SDI LOOP OUT
- Receiver supports HDMI OUT A, SDI OUT A, HDMI OUT B, and SDI OUT B
- HDMI/SDI port supports 1080P60 input and output
- HDMI/SDI port supports fractional frame rate input and output
- Supports dual UVC streaming outputs (1080P60) on the receiver (Dual-stream capture is not supported on macOS)
- Receiver's Ethernet port supports NDI transmission protocol and RTMP streaming
- Supports low-frame-rate conversion output on the receiver (Signals like P24/P25 can be converted to P60 output, with the same smoothness as P60 output)
- Supports multiple power supply options: DC power adapter (locking) + NP-F batteries for the transmitter, DC power adapter (locking) + V-Mount batteries plate for the receiver
- Supports point-to-point pairing


Note: The related data is based on laboratory test results.

Configuration

1

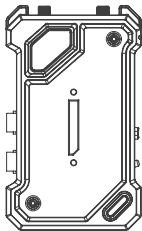

2

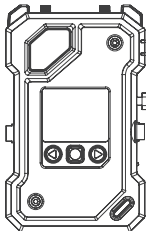

3




4



5



6




7



8



9



10




11



12



13



14



Configuration


SKU	2 TX & 1 RX	1 TX & 1 RX	1 TX
① Transmitter (TX)	2	1	1
② Receiver (RX)	1	1	-
③ Blade Antenna	7	5	2
④ USB-C OTG Adapter	1	1	1
⑤ Mushroom Antenna	-	-	-
⑥ D-tap to DC Cable (locking)	-	-	-
⑦ DC Power Adapter	1	1	-
⑧ Screw Fitting for Stabilizer	-	-	-
⑨ Magic Arm (5-inch)	-	-	-
⑩ Rotatable Cold Shoe Mount	-	-	-
⑪ Cold Shoe	2	1	-
⑫ Expansion Accessory	2	1	-
⑬ Warranty Card & Compliance Information	1	1	1
⑭ Quick Guide & Packing List Card	1	1	1

Note:

1. The quantity and appearance of items depend on the product configuration, the actual packing list card shall prevail.
2. You can buy the above mentioned accessories separately from the EaglesHero's official website if necessary.


Overview

Transmitter

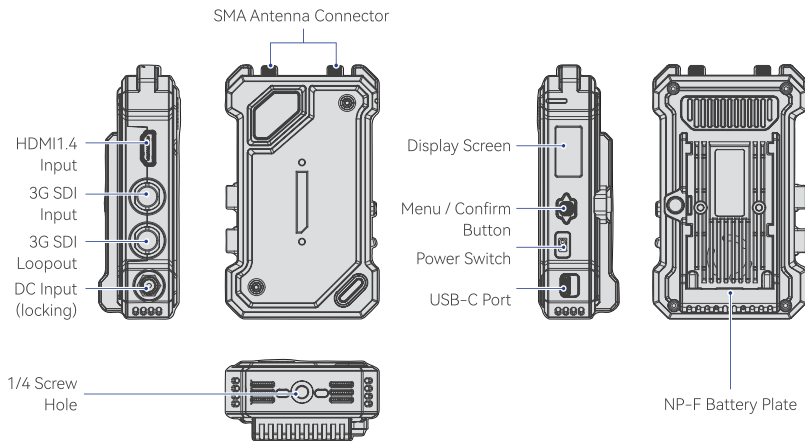


Overview

Receiver

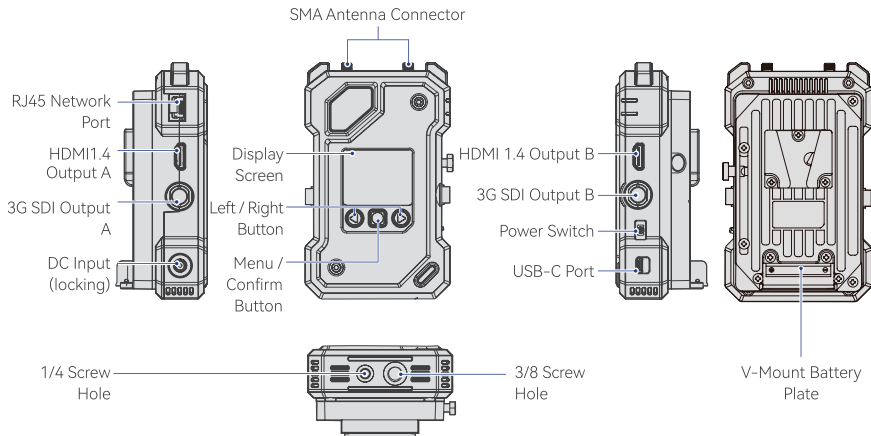


Installation

■ Transmitter

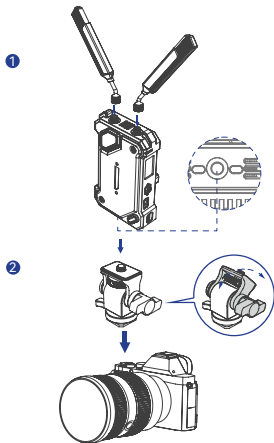

1. Install the antennas as shown in the diagram.
2. Mount the transmitter to the camera using the magic arm, rotatable cold shoe mount or other accessories.

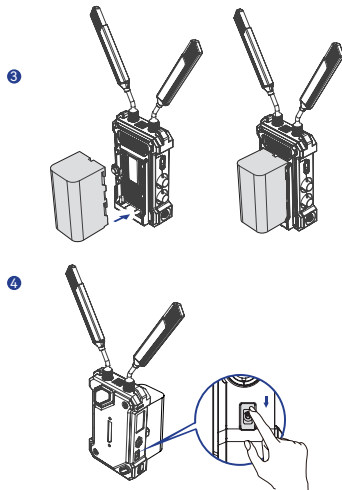


3. Install the battery (Support NP-F batteries or DC power adapter)
4. Toggle the power switch downward to turn on the transmitter.


Installation

Receiver

1

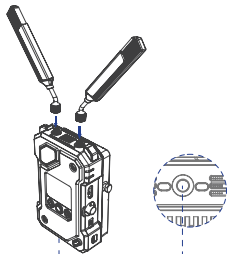


2




1. Install the antennas as shown in the diagram
2. Mount the receiver on the tripod using the 1/4 screw hole or 3/8 screw hole at the bottom.

3

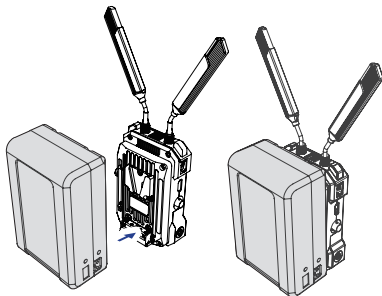


4

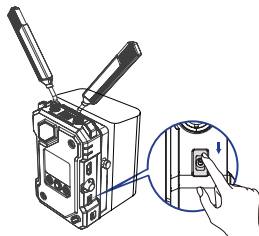


3. Install the battery (Support V-Mount battery or DC power adapter).
4. Toggle the power switch downward to turn on the receiver.

Home Screen Introduction

Transmitter

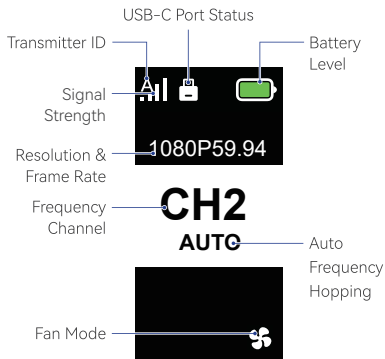

Receiver

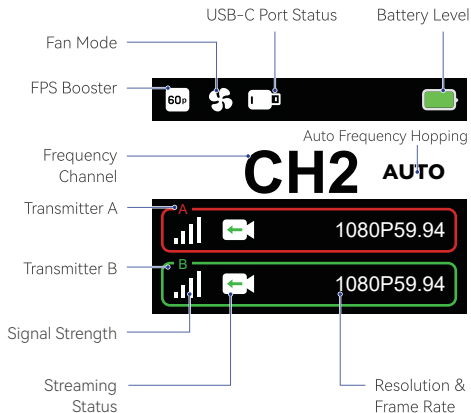

Press and hold the menu button for 3 seconds to enter the menu interface. Use the up and down buttons to switch between menu options, and press the menu button to confirm your selection.

■ TX Indicator Lights

	Red light steady		Unpaired / Signal Lost
	Red light flashing slowly		Battery is below 15% (approximately 30 minutes of usage remaining)
	Red light flashing		Battery is below 5% (approximately 10 minutes of usage remaining)
	Green light steady		Successfully paired and signal is stable

■ RX Indicator Lights

	Red light steady		Unpaired / Signal Lost
	Red light flashing slowly		Battery is below 15% (approximately 30 minutes of usage remaining) — both lights will flash
	Red light flashing		Battery is below 5% (approximately 10 minutes of usage remaining) — both lights will flash
	Green light steady		Successfully paired and signal is stable (top light for Transmitter A, bottom light for Transmitter B).

■ Transmitter Functions Description



Pairing

Click to enter pairing mode, and the receiver must also enter pairing mode for successful pairing.



Fan Settings

Select different fan modes based on varying cooling requirements.



System Settings

View system-related setting information.



Language Switch

Switch between Chinese and English.



Version Information

Check the software and hardware version of the system.



Reset

Resets to default settings.

Receiver Function Description



Pairing

Click to enter pairing mode, and the receiver must also enter pairing mode for successful pairing.



Frequency Scanning

After scanning, you can select high-quality frequency channel by pressing buttons or activate the auto-hopping function.



Fan Settings

You can select different fan modes based on varying cooling requirements.



FPS Booster

The RX will convert incoming low frame rate signals, such as P24, P25, or P30, into P60 to reduce transmission latency.



Streaming

Choose different streaming methods based on your needs, which will provide you with varying performance experiences.

Note: Activating the streaming mode will impact the latency of regular video transmission.



Web Information

View the device's IP address.



Return



System Settings

View system-related setting information.



Frozen Frame

Controls whether the last frame after a transmission interruption is the final frame from the signal source.



Language Switch

Switch between Chinese and English.



Version Information

Check the software and hardware version of the system.



Reset

Resets to default settings.

■ Customize Frozen Frame

To customize the frozen frame, the following conditions must be met:


1. Image Format: JPG
2. Resolution: 1920 x 1080
3. Image Name: logo.JPG
4. Size: Within 1MB

Import the image that meets the above conditions into the root directory of the USB drive. Insert the USB drive into the receiver while it is powered on and wait for it to load.

Gateway Settings (Using a switch can achieve the same effect)

■ Operation Guide

1. Connect the receiver to the computer using an Ethernet cable.
2. Right-click on the "Network" and select "Properties."

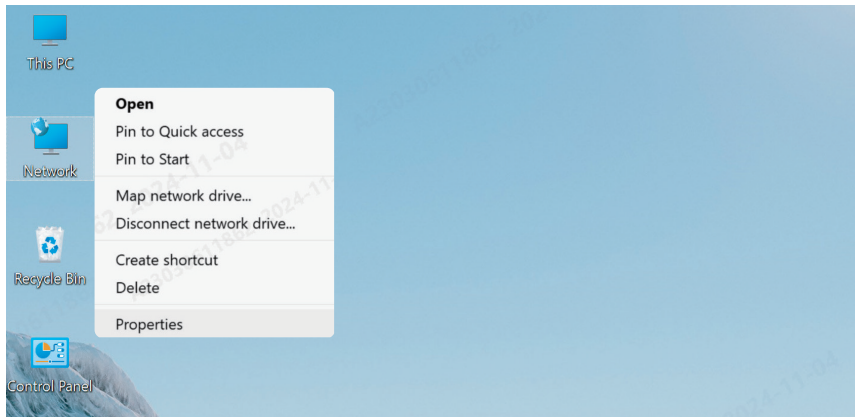

3. Click on "Ethernet."



View your basic network information and set up connections

View your active networks

y6cd7.com

Public network

Access type: Internet

Connections: WLAN (Guest_05)

未识别的网络

Public network

Access type: No Internet access

Connections: Ethernet

Change your networking settings



[Set up a new connection or network](#)

Set up a broadband, dial-up, or VPN connection; or set up a router or access point.




[Troubleshoot problems](#)


Diagnose and repair network problems, or get troubleshooting information.

Product Usage

- Click on "Properties".
- Click on "Internet Protocol Version 4 (TCP/IPv4)," then click on "Properties."

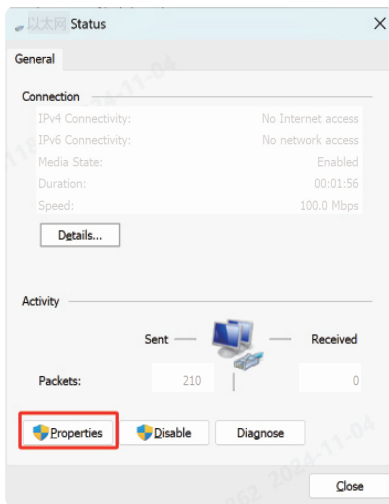


(3)

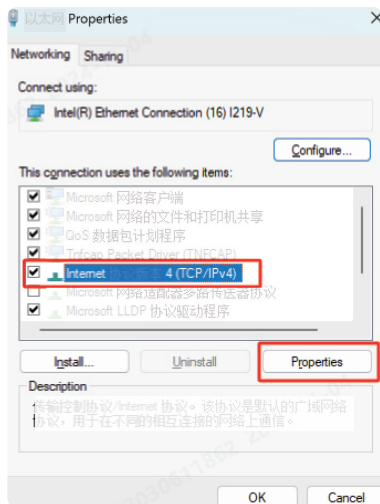


(4)

Product Usage

- Choose "Use the following IP address," input the IP address, subnet mask, and default gateway as shown in the receiver's Web information to ensure they are on the same network, then click "OK"
- Click "Close."

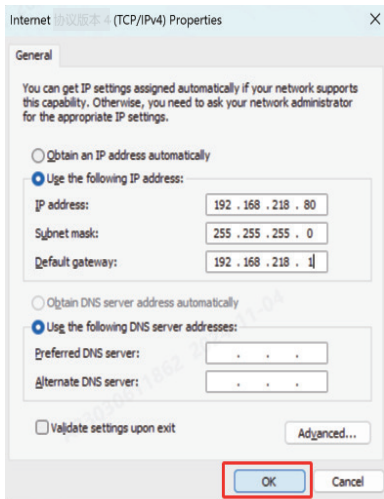

(5)

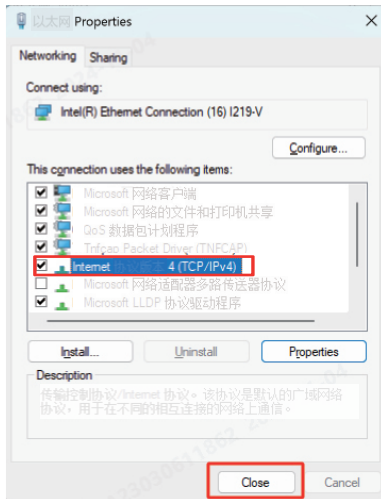

(6)

RTMP Streaming – 4G LTE Wi-Fi Modem

■ Operation Guide

1. Connect the device.
2. Connect the receiver to the computer using an Ethernet cable, ensuring that the computer and receiver are on the same gateway (for details, refer to Gateway Settings).
3. Connect a 4G LTE Wi-Fi modem capable of internet connectivity to the transmission receiver using an OTG adapter.
4. Check for any changes at the corresponding USB-C icon:



Network Connected




Streaming



Streaming Interrupted

5. Access the **Web Information** interface through the receiver to view the IP address.
6. Open a browser on a PC or mobile device and enter the receiver's IP address.

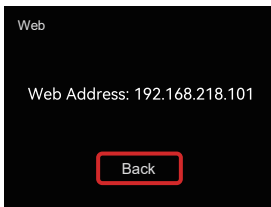

Web Information

7. After entering the page, input the streaming URL and key for the live streaming platform to start streaming.

The screenshot displays the EAGLES HERO web interface. At the top, there is a header with the logo on the left, language selection buttons for "English" and "русский" in the center, and a "Log Out" button on the right. A left sidebar contains a "Settings" button with a gear icon. The main content area is divided into two sections. The upper section, titled "Device RTMP Streaming Settings", contains two side-by-side configuration panels for "TX-A" and "TX-B". Each panel includes a label for "RTMP Streaming Address", a text input field containing "rtmp://a.rtmp.youtube.com/", a label for "Key", and a text input field containing "666666". Below each panel is an orange "Start Streaming" button. The lower section, titled "Device Channel", features a label "Current Channel", a dropdown menu showing "13", and an orange "Start Scanning Channels" button.

EAGLES HERO English русский Log Out

Settings

Device RTMP Streaming Settings

TX-A

RTMP Streaming Address

rtmp://a.rtmp.youtube.com/

Key

666666

Start Streaming

TX-B

*RTMP Streaming Address

rtmp://a.rtmp.youtube.com/

Key

666666

Start Streaming

Device Channel


Current Channel 13

Start Scanning Channels

RTMP Streaming – Local Area Network

■ Operation Guide

1. Connect the device.
2. Connect the receiver to the internet or router using an Ethernet cable.
3. Access the **Web Information** through the receiver to view the IP address.
4. Ensure the PC or mobile device is connected to the same local area network segment as the receiver via Ethernet or Wi-Fi.
5. Open a browser on the PC or mobile device and enter the receiver's IP address.

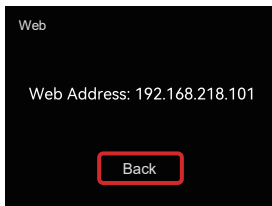

Web Information

6. After entering the page, input the streaming URL and key for the live streaming platform to start streaming.

The screenshot displays the EAGLES HERO web interface. At the top, there is a header with the logo on the left, a language selector set to 'English' and a user identifier 'pycosah' in the center, and a 'Log Out' button on the right. A left sidebar contains a 'Settings' button. The main content area is divided into two sections. The upper section, titled 'Device RTMP Streaming Settings', contains two columns for 'TX-A' and 'TX-B'. Each column has a label 'RTMP Streaming Address' above a text input field containing 'rtmp://a.rtmp.youtube.com/' and a label 'Key' above a text input field containing '666666'. Below each set of inputs is an orange 'Start Streaming' button. The lower section, titled 'Device Channel', features a label 'Current Channel' next to a dropdown menu showing '13', and an orange 'Start Scanning Channels' button.

EAGLES HERO English pycosah Log Out

Settings

Device RTMP Streaming Settings

TX-A

RTMP Streaming Address

Key

Start Streaming

TX-B

*RTMP Streaming Address

Key

Start Streaming

Device Channel


Current Channel 13

Start Scanning Channels

NDI Streaming (Using OBS as an Example)


■ Operation Guide

1. Keep the computer and the receiver on the same gateway (for details, refer to Gateway Settings).
2. Disconnect the network.

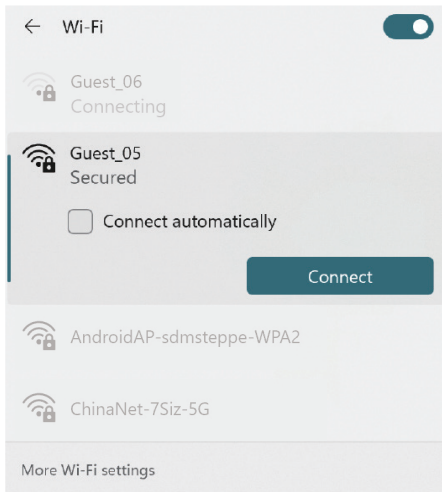


Product Usage

3. Open the OBS software with the installed OBS-NDI.
4. Click to add a video source.

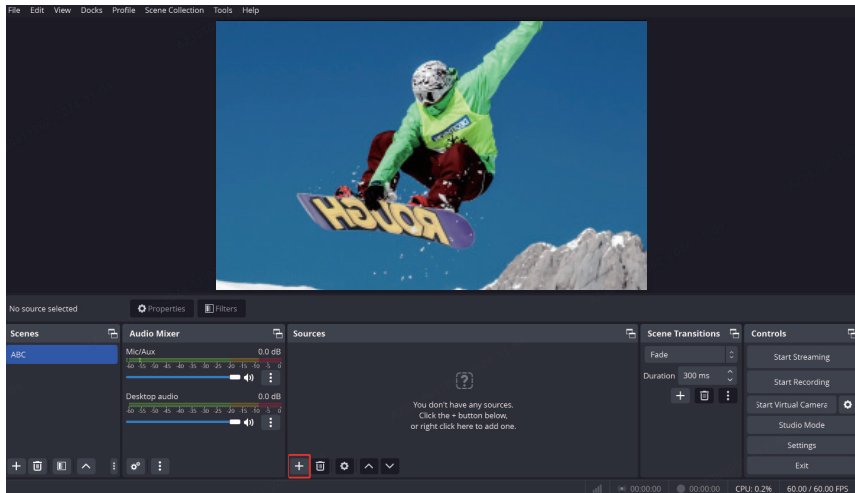


Product Usage

5. Add NDI source and confirm.

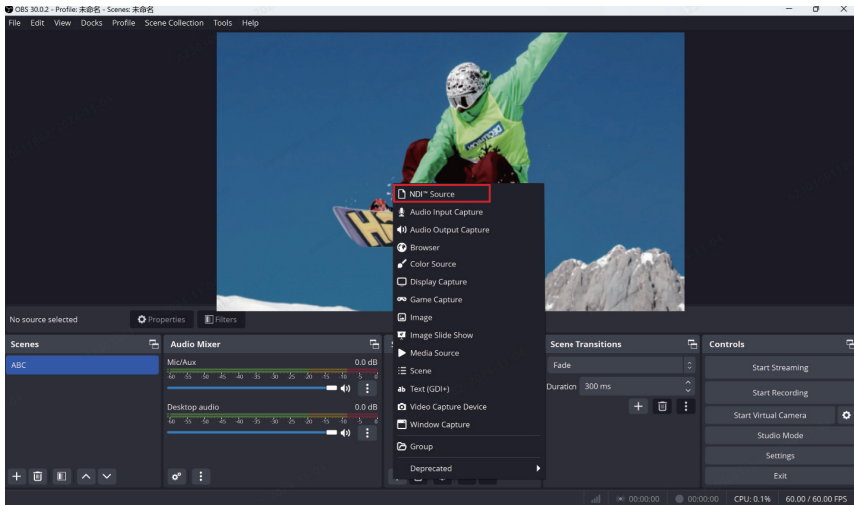


Product Usage

6. Select the corresponding video source and confirm.

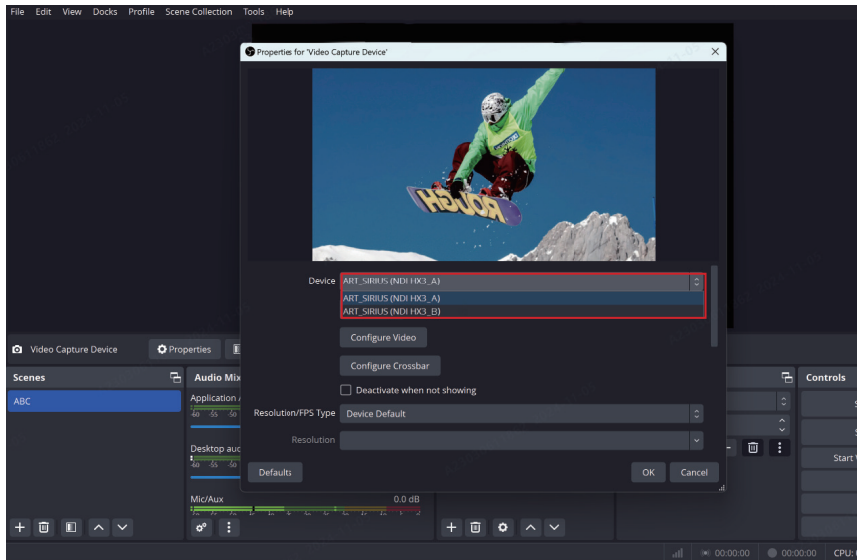


Product Usage

7. Connect the Internet.

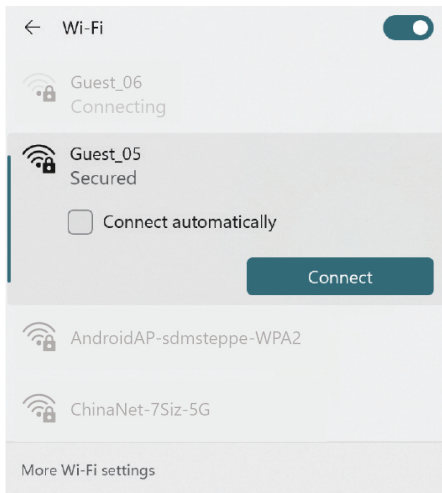

Product Usage

8. Start streaming.

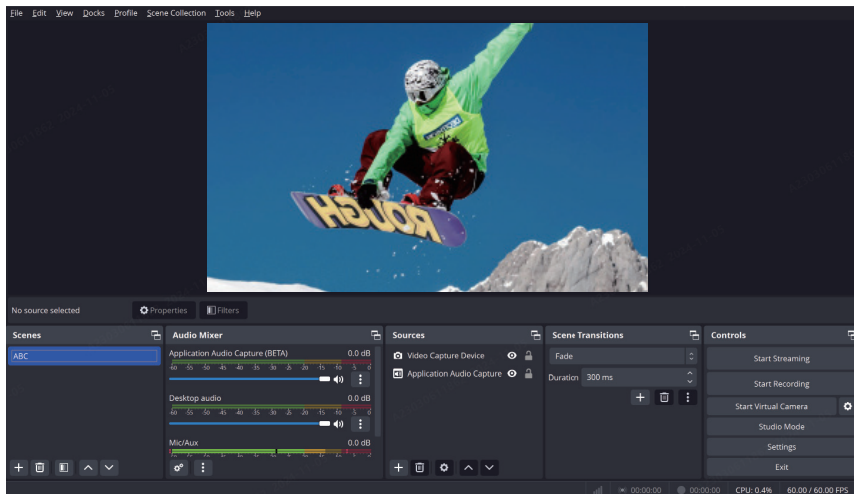

Specifications

	Transmitter	Receiver
Port	DC Input: 2.0mm Core Socket HDMI Input: HDMI 1.4b SDI Input: 3G SDI SDI Loopout: 3G SDI USB-C: USB 2.0 OTG Antenna: SMA Male	DC Input: 2.0mm Core Socket HDMI Output: HDMI 1.4b × 2 SDI Output: 3G SDI × 2 USB-C: USB 2.0 OTG Antenna: SMA Male Ethernet Port: RJ45, 100 Mbps
Power Supply	NP-F Battery Voltage Range: 6.8 – 8.4V DC Voltage Range: 6 – 16V	V-Mount Battery Voltage Range: 11.8 – 16.8V DC Voltage Range: 6 – 16V
Power Consumption	<10W	<11W
Net Weight	210g	440g
Dimensions (L × W × H)	114.8 × 69 × 35.5mm (4.5 × 2.7 × 1.4")	142 × 87.2 × 33.2mm (5.6 × 3.4 × 1.3")
Operating Frequency	5.15 – 5.85 GHz	
Transmit Power	< 23 dBm	/
Receiver Sensitivity	/	-90 dBm
Latency	≥ 33ms	
Bandwidth	40 MHz	

Specifications

HDMI Input	HDMI Output	SDI Output
720p50/59.94/60	720p50/59.94/60	720p50/59.94/60
1080i50/59.94/60	1080i50/59.94/60	1080i50/59.94/60
1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30
1080p50/59.94/60	1080p50/59.94/60	1080p50/59.94/60

SDI Input	HDMI Output	SDI Loopout /Output
720p50/59.94/60	720p50/59.94/60	720p50/59.94/60
1080i50/59.94/60	1080i50/59.94/60	1080i50/59.94/60
1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30
1080p50/59.94/60	1080p50/59.94/60	1080p50/59.94/60

Note: Due to differences in various countries and regions, there may be variations in the operating frequency band and wireless transmit power of the product. For details, please refer to local laws and regulations.

If you encounter any problems in using the product or need any help, please contact Eagleshero Support Team via the following ways:



Eagleshero



eagleshero.official



Eagleshero Official



Eagleshero



Eagleshero



Eagleshero Official



support@eagleshero.com



www.eagleshero.com

Statement:

All copyrights belong to SHENZHEN XIANGYING TECHNOLOGY CO.,LTD. Without the written approval of SHENZHEN XIANGYING TECHNOLOGY CO.,LTD., no organization or individual may copy or reproduce part or all of any written or illustrative content and disseminate it in any form.

Trademark Statement:

All the trademarks are owned by SHENZHEN XIANGYING TECHNOLOGY CO.,LTD.

Note:

Due to product version upgrades or other reasons, this Quick Guide will be updated from time to time. Unless otherwise agreed, this document is provided as a guide for use only. All representations, information, and recommendations in this document do not constitute warranties of any kind, express or implied.

Manufacturer: SHENZHEN XIANGYING TECHNOLOGY CO., LTD.

Address: The first and second floors of Zhongyuntai Technology Industrial Plant in Tangtou Community, Shiyan Street, Bao'an District, Shenzhen, 518108, China

MADE IN CHINA



Astro C2

Руководство пользователя

V1.0

Введение

Благодарим вас за приобретение беспроводной системы передачи видеосигнала с высоким разрешением **Astro C2**. Изделие оснащено новейшей разработкой — технологией беспроводной передачи HEVO 2.0, обеспечивающей плавную перестройку частоты и сверхнизкую задержку при передаче видео.



Отсканируйте QR-код, чтобы получить более подробную информацию о руководстве пользователя


■ Основные особенности

- Возможно подключение до двух передатчиков к одному приемнику
- Собственная новейшая разработка — технология беспроводной передачи HEVO 2.0 — обеспечивает сверхвысокую стабильность и плавную перестройку частоты
- Сверхнизкая задержка не более 33 мс (1080P60 *)
- Дальность беспроводной передачи 1000 м
- Передатчик поддерживает вход HDMI IN, вход SDI и сквозной выход SDI
- Приемник поддерживает выход HDMI A, выход SDI A, выход HDMI B и выход SDI B
- Порт HDMI/SDI поддерживает вход и выход с разрешением 1080P60
- Порт HDMI/SDI поддерживает вход и выход с переменной кадровой частотой
- Два выхода потоковой передачи UVC (1080P60) на приемнике (захват двойного потока не поддерживается ОС macOS)
- Порт Ethernet приемника поддерживает протокол передачи NDI и потоковую передачу RTMP
- Выход преобразования с низкой частотой кадров на приемнике (сигналы как P24/P25 могут быть преобразованы в выходной сигнал P60 с плавностью, аналогичной для выхода P60)
- Несколько вариантов питания: адаптер питания постоянного тока (с фиксатором) + батареи типа NP-F для передатчика, адаптер питания постоянного тока (с фиксатором) + пластина для батареи с креплением V-Mount для приемника
- Соединение точка-точка


Примечание: соответствующие данные основаны на результатах лабораторных испытаний.

Конфигурация

1

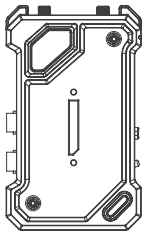

2

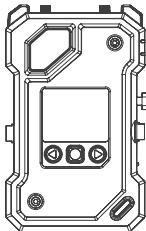

3




4



5



6




7



8



9



10




11



12



13



14



Конфигурация

Артикул	2 передатчика + 1 приемник	1 передатчик + 1 приемник	1 передатчик
① Передатчик (TX)	2	1	1
② Приемник (RX)	1	1	–
③ Лопастная антенна	7	5	2
④ Переходник USB-C OTG	1	1	1
⑤ Грибовидная антенна	–	–	–
⑥ Кабель D-Tap to DC (с фиксатором)	–	–	–
⑦ Адаптер питания	1	1	–
⑧ Винтовое крепление для стабилизатора	–	–	–
⑨ Шарнирный штатив (5 дюймов)	–	–	–
⑩ Поворотное крепление Cold Shoe («холодный башмак»)	–	–	–
⑪ Холодный башмак	2	1	–
⑫ Винтовая площадка	2	1	–
⑬ Гарантийный талон и информация о соответствии	1	1	1
⑭ Краткое руководство и карточка с упаковочным листом	1	1	1


Примечание:

1. Количество и внешний вид аксессуаров зависят от конфигурации изделия. Приоритетную силу имеет фактический упаковочный лист.
2. При необходимости вы можете отдельно приобрести вышеуказанные аксессуары на официальном веб-сайте Eagles Hero.


■ Передатчик




■ Приемник

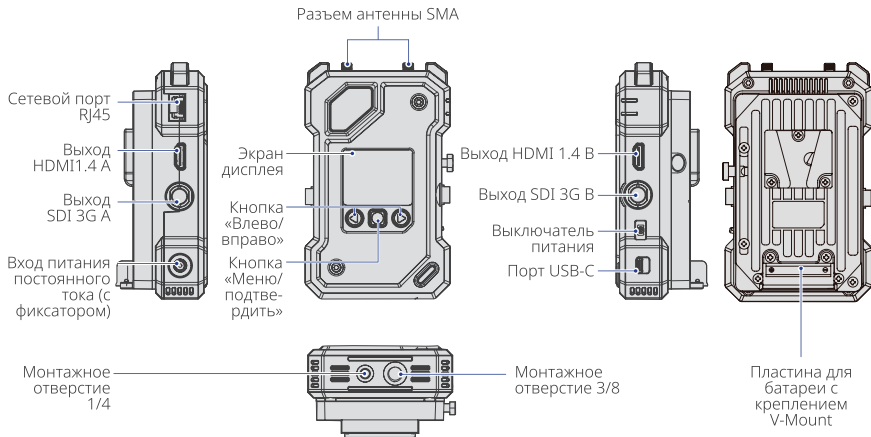

■ Передатчик

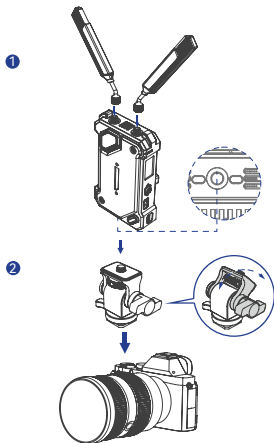

1. Установите антенны, как показано на схеме.
2. Прикрепите передатчик к камере с помощью шарнирного штатива, поворотного крепления Cold Shoe («холодного башмака») или других аксессуаров.

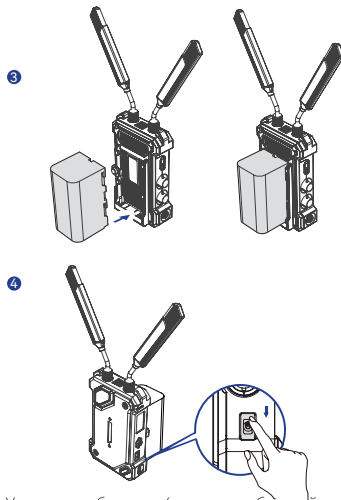


3. Установите батарею (поддержка батарей типа NP-F или адаптера питания постоянного тока)
4. Включите передатчик, для чего переведите выключатель питания в нижнее положение.

Установка

■ Приемник

1

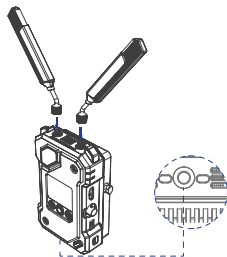


2




1. Установите антенны, как показано на схеме.
2. Закрепите приемник на штативе с помощью монтажного отверстия 1/4 или 3/8 в нижней части.

3

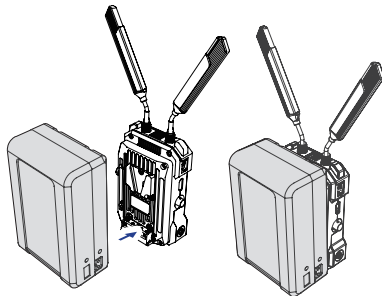


4

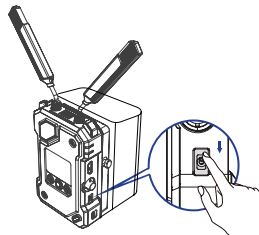


3. Установите батарею (поддержка батареи с креплением V-Mount или адаптера питания постоянного тока).
4. Включите приемник, для чего переведите выключатель питания в нижнее положение.

■ Передатчик

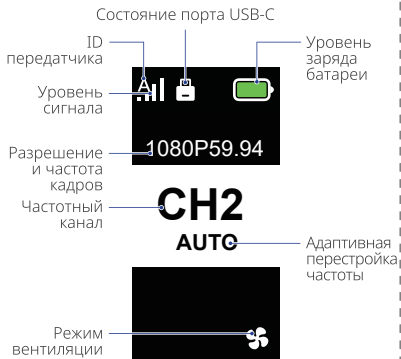

■ Приемник

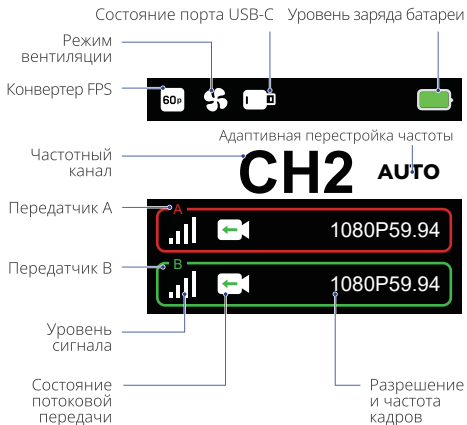

Чтобы войти в интерфейс меню, нажмите и в течение 3 секунд удерживайте кнопку меню. Используйте кнопки вверх и вниз для переключения между пунктами меню, нажимайте кнопку меню для подтверждения выбора.

■ Индикаторы на TX

	Индикатор светится красным		Без сопряжения / сигнал потерян
	Индикатор медленно мигает красным		Заряд батареи менее 15 % (осталось около 30 минут работы)
	Индикатор мигает красным		Заряд батареи менее 5 % (осталось около 10 минут работы)
	Индикатор светится зеленым		Сопряжение успешно выполнено, и сигнал стабилен

■ Индикаторы на RX

	Индикатор светится красным		Без сопряжения / сигнал потерян
	Индикатор медленно мигает красным		Заряд батареи менее 15 % (осталось около 30 минут работы) — будут мигать оба индикатора
	Индикатор мигает красным		Заряд батареи менее 5 % (осталось около 10 минут работы) — будут мигать оба индикатора
	Индикатор светится зеленым		Сопряжение успешно выполнено, и сигнал стабилен (верхний индикатор на передатчике А, нижний индикатор на передатчике В).

Знакомство с функциями

■ Описание функций передатчика



Сопряжение

Нажмите, чтобы перейти в режим сопряжения. Для успешного выполнения сопряжения приемник также должен перейти в режим сопряжения.



Настройки вентилятора

Выбор различных режимов работы вентилятора в зависимости от потребностей в охлаждении.



Настройки системы

Просмотр информации о системных настройках.



Переключение языка

Переключение между китайским и английским языками.



Сведения о версии

Проверка версии программного и аппаратного обеспечения системы.



Сброс

Сброс до настроек по умолчанию.

■ Описание функций приемника



Сопряжение

Нажмите, чтобы перейти в режим сопряжения. Для успешного выполнения сопряжения приемник также должен перейти в режим сопряжения.



Сканирование частот

После сканирования вы можете выбрать высококачественный частотный канал, нажав кнопки или активировать функцию автоперестройки.



Настройки вентилятора

Вы можете выбрать различные режимы работы вентилятора в зависимости от потребностей в охлаждении.



Конвертер FPS

Приемник преобразует входящие сигналы с низкой частотой кадров, такие как P24, P25 или P30, в P60, чтобы сократить задержку передачи.



Потоковая передача

Выбор различных способов потоковой передачи в зависимости от потребностей, обеспечивающих необходимую эффективность.

Примечание: Включение режима потоковой передачи будет влиять на задержку обычной передачи видеосигнала.



Веб-информация

Просмотр IP-адреса устройства.



Возврат



Настройки системы

Просмотр информации о системных настройках.



Стоп-кадр

Проверяется, является ли последний кадр после прерывания передачи последним поступившим от источника сигнала.



Переключение языка

Переключение между китайским и английскими языками.



Сведения о версии

Проверка версии программного и аппаратного обеспечения системы.



Сброс

Сброс до настроек по умолчанию.

■ Настройка стоп-кадра

Необходимо выполнить следующие условия для настройки стоп-кадра:


1. Формат изображения: JPG
2. Разрешение: 1920 × 1080
3. Имя изображения: logo.JPG
4. Размер: не более 1 МБ

Импортируйте изображение, соответствующее условиям выше, в корневой каталог накопителя USB. Вставьте накопитель USB во включенный приемник и дождитесь его загрузки.

Настройки шлюза (с помощью коммутатора можно достичь аналогичного эффекта)

■ Руководство по эксплуатации

1. Подключите приемник к компьютеру с помощью кабеля Ethernet.
2. Нажмите правой кнопкой мыши на «Network» и выберите «Properties».

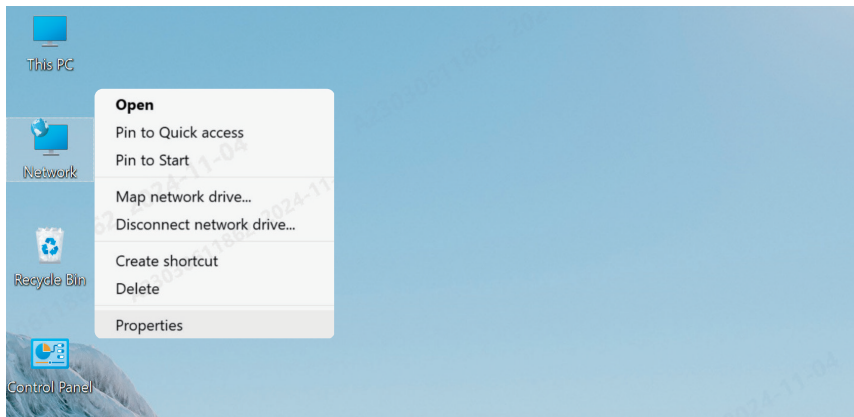

Использование изделия

3. Нажмите «Ethernet».



View your basic network information and set up connections

View your active networks

y6cd7.com

Public network

Access type: Internet

Connections: WLAN (Guest_05)

未识别的网络

Public network

Access type: No Internet access

Connections: Ethernet

Change your networking settings



[Set up a new connection or network](#)

Set up a broadband, dial-up, or VPN connection; or set up a router or access point.




[Troubleshoot problems](#)


Diagnose and repair network problems, or get troubleshooting information.

Использование изделия

4. Нажмите «Properties».
5. Нажмите «Internet Protocol Version 4 (TCP/IPv4)», а затем нажмите «Properties».

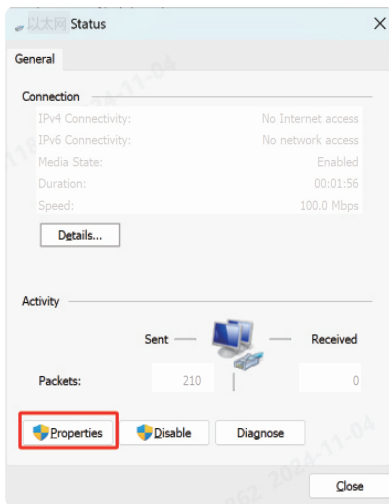


(3)

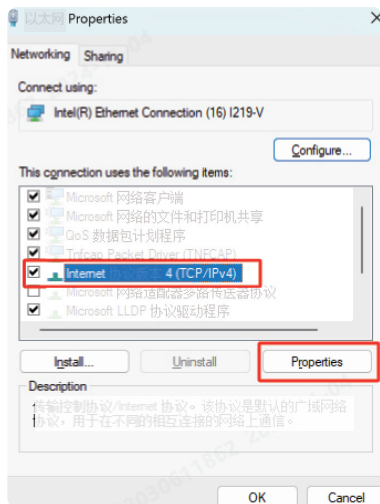


(4)

Использование изделия

6. Выберите «Use the following IP address», введите IP-адрес, маску подсети и шлюз по умолчанию, как указано в веб-информации приемника, чтобы они находились в одной сети, а затем нажмите «OK».
7. Нажмите «Close».

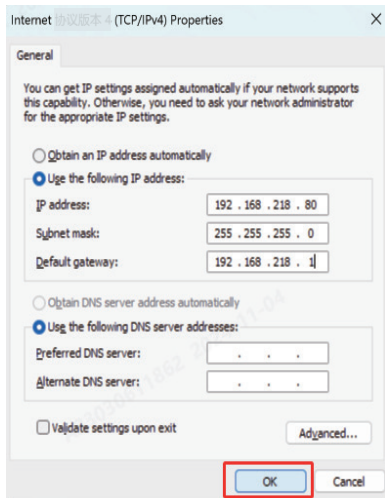

(5)

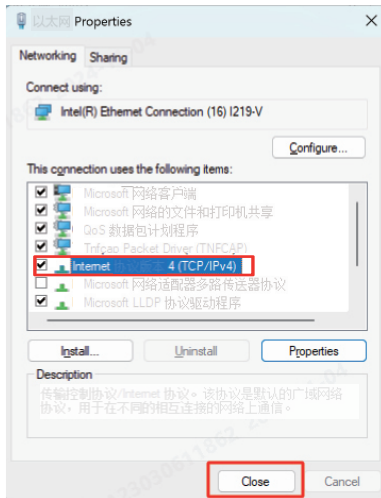

(6)

Потоковая передача RTMP: модем Wi-Fi 4G LTE

■ Руководство по эксплуатации

1. Подключите устройство.
2. Подключите приемник к компьютеру с помощью кабеля Ethernet, при этом компьютер и приемник должны быть подключены к одному шлюзу (подробнее см. в разделе «Настройки шлюза»).
3. Подключите модем Wi-Fi 4G LTE, способный поддерживать подключение к сети Интернет, к приемнику передачи с помощью адаптера OTG.
4. Проверьте наличие изменений с соответствующем значком USB-C:



Подключено к сети




Потоковая передача



Потоковая передача прервана

5. Перейдите в интерфейс **Веб-информация** через приемник, чтобы посмотреть IP-адрес.
6. Откройте браузер на ПК или мобильном устройстве и введите IP-адрес приемника.

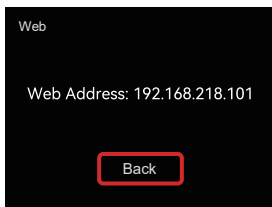

Веб-информация

7. После входа на страницу введите URL-адрес потоковой передачи и ключ для платформы прямой трансляции, чтобы начать потоковую передачу.

The screenshot displays the EAGLES HERO web interface. At the top left is the logo. To its right are language selection buttons for 'English' and 'русский'. At the top right is a 'Log Out' button. On the left side, there is a 'Settings' button with a gear icon. The main content area is divided into two sections. The first section, titled 'Device RTMP Streaming Settings', contains two identical configuration boxes labeled 'TX-A' and 'TX-B'. Each box has a label 'RTMP Streaming Address' above a text input field containing 'rtmp://a.rtmp.youtube.com/' and a label 'Key' above a text input field containing '666666'. Below each set of inputs is an orange 'Start Streaming' button. The second section, titled 'Device Channel', contains a label 'Current Channel' next to a dropdown menu showing '13' and a downward arrow. To the right of the dropdown is an orange 'Start Scanning Channels' button.

EAGLES HERO English русский Log Out

Settings

Device RTMP Streaming Settings

TX-A

RTMP Streaming Address

rtmp://a.rtmp.youtube.com/

Key

666666

Start Streaming

TX-B

*RTMP Streaming Address

rtmp://a.rtmp.youtube.com/

Key

666666

Start Streaming

Device Channel


Current Channel 13

Start Scanning Channels

Потоковая передача RTMP: локальная сеть

■ Руководство по эксплуатации

1. Подключите устройство.
2. Подключите приемник к сети Интернет или маршрутизатору с помощью кабеля Ethernet.
3. Войдите **Веб-информация** через приемник, чтобы посмотреть IP-адрес.
4. Убедитесь, что ПК или мобильное устройство подключены с помощью Ethernet или Wi-Fi к тому же сегменту локальной сети, что и приемник.
5. Откройте браузер на ПК или мобильном устройстве и введите IP-адрес приемника.

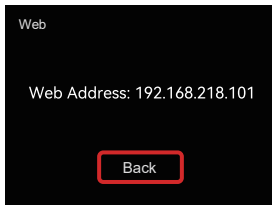

Веб-информация

6. После входа на страницу введите URL-адрес потоковой передачи и ключ для платформы прямой трансляции, чтобы начать потоковую передачу.

The screenshot displays the EAGLES HERO web interface. At the top left is the logo, and next to it are language selection buttons for "English" and "русский". At the top right is a "Log Out" button. On the left side, there is a "Settings" button with a gear icon. The main content area is titled "Device RTMP Streaming Settings" and contains two configuration panels, TX-A and TX-B. Each panel has fields for "RTMP Streaming Address" (containing "rtmp://a.rtmp.youtube.com/") and "Key" (containing "666666"), followed by a "Start Streaming" button. Below these panels is a "Device Channel" section with a "Current Channel" dropdown menu set to "13" and a "Start Scanning Channels" button.

EAGLES HERO English русский Log Out

Settings

Device RTMP Streaming Settings

TX-A

RTMP Streaming Address

rtmp://a.rtmp.youtube.com/

Key

666666

Start Streaming

TX-B

*RTMP Streaming Address

rtmp://a.rtmp.youtube.com/

Key

666666

Start Streaming

Device Channel


Current Channel 13

Start Scanning Channels

Потоковая передача NDI (с использованием программы OBS в качестве примера)


■ Руководство по эксплуатации

1. Подключите компьютер и приемник к одному шлюзу (подробнее см. в разделе «Настройки шлюза»).
2. Отключите сеть.

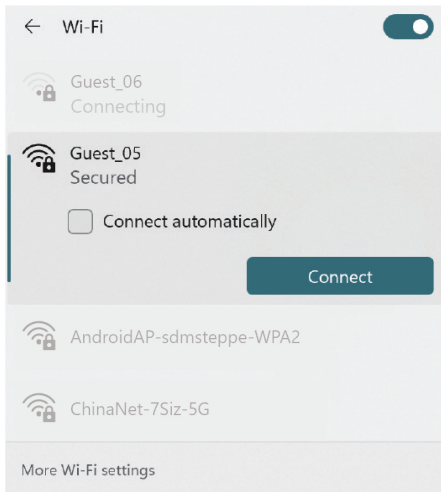


Использование изделия

3. Откройте ПО OBS с установленным плагином OBS-NDI.
4. Нажмите, чтобы добавить источник видео.

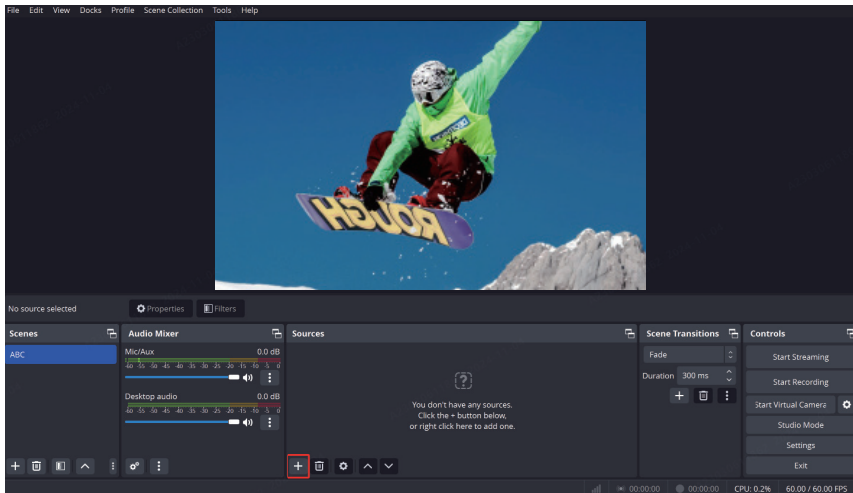


Использование изделия

5. Добавьте источник NDI и подтвердите.

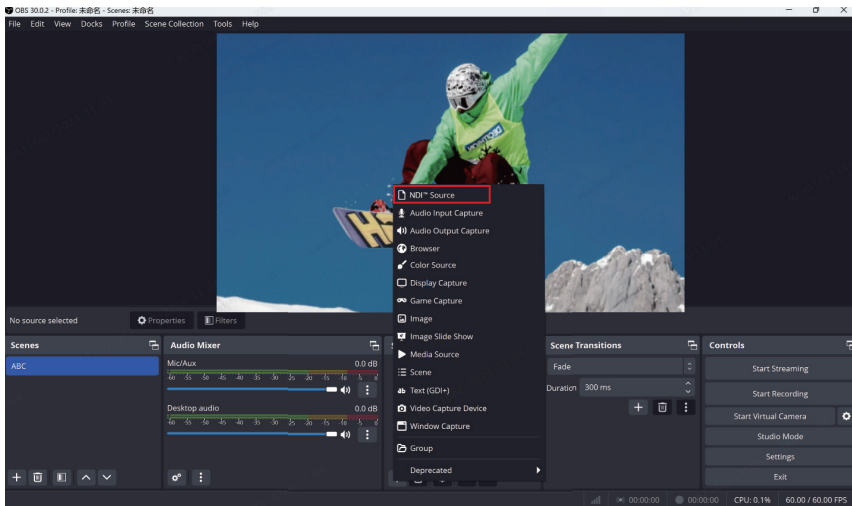


Использование изделия

6. Выберите соответствующий источник видео и подтвердите.

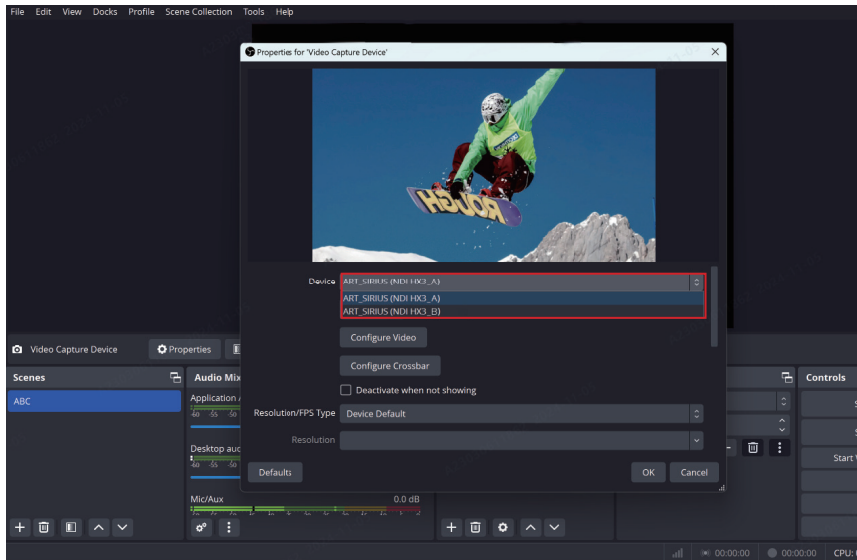


7. Выполните подключение к сети Интернет.

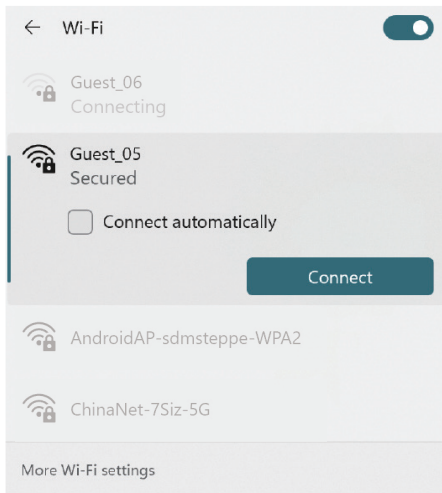

Использование изделия

8. Начните потоковую передачу.

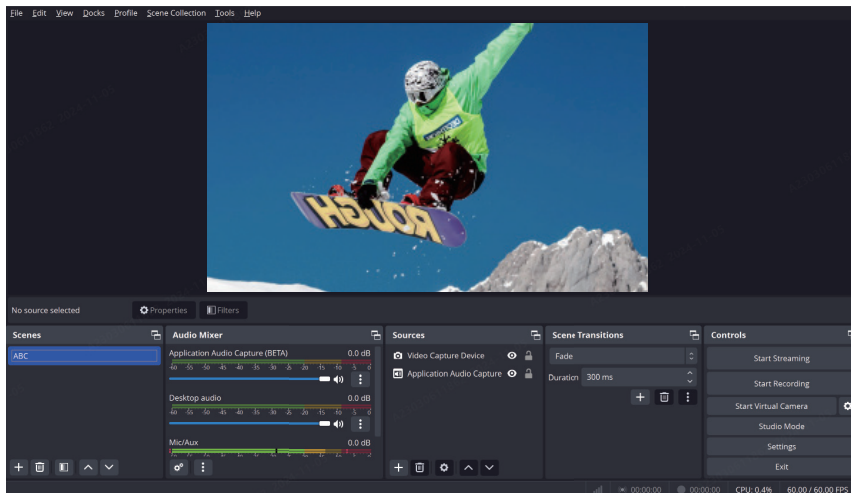

Характеристики

	Передатчик	Приемник
Порт	Вход постоянного тока: гнездо с пином 2,0 мм Вход HDMI: HDMI 1.4b Вход SDI: SDI 3G Сквозной выход SDI: SDI 3G USB-C: USB 2.0 OTG Антенна: SMA с внешней резьбой	Вход постоянного тока: гнездо с пином 2,0 мм Выход HDMI: HDMI 1.4b (2 шт.) Выход SDI: SDI 3G (2 шт.) USB-C: USB 2.0 OTG Антенна: SMA с внешней резьбой Порт Ethernet: RJ45, 100 Мбит/с
Питание	Диапазон напряжения батареи типа NP-F: 6,8–8,4 В Диапазон напряжения пост. тока: 6–16 В	Диапазон напряжения батареи с креплением V-Mount: 11,8–16,8 В Диапазон напряжения пост. тока: 6–16 В
Потребляемая мощность	< 10 Вт	< 11 Вт
Вес нетто	210 г	440 г
Размеры (В × Ш × Г)	114,8 × 69 × 35,5 мм	142 × 87,2 × 33,2 мм
Рабочая частота	5,15–5,85 ГГц	
Мощность передачи	< 23 дБм	/
Чувствительность	/	–90 дБм
Задержка	≥ 33 мс	
Полоса пропускания	40 МГц	

Характеристики

Вход HDMI	Выход HDMI	Выход SDI
720p50/59.94/60	720p50/59.94/60	720p50/59.94/60
1080i50/59.94/60	1080i50/59.94/60	1080i50/59.94/60
1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30
1080p50/59.94/60	1080p50/59.94/60	1080p50/59.94/60

Вход SDI	Выход HDMI	Сквозной выход/ выход SDI
720p50/59.94/60	720p50/59.94/60	720p50/59.94/60
1080i50/59.94/60	1080i50/59.94/60	1080i50/59.94/60
1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30	1080p23.98/24/25/29.97/30
1080p50/59.94/60	1080p50/59.94/60	1080p50/59.94/60

Примечание: Полосы рабочих частот и мощность беспроводной передачи изделия могут различаться в зависимости от страны или региона. Более подробную информацию см. в местных законах и правилах.

Если у вас возникли проблемы с использованием изделия или вам понадобилась помощь, обратитесь в службу поддержки Eagleshero следующими способами:



Eagleshero



eagleshero.official



Eagleshero Official



Eagleshero



Eagleshero



Eagleshero Official



support@eagleshero.com



www.eagleshero.com

Заявление:

Все авторские права принадлежат компании SHENZHEN XIANGYING TECHNOLOGY CO., LTD. Без письменного разрешения компании SHENZHEN XIANGYING TECHNOLOGY CO., LTD. ни организации, ни частные лица не могут ни полностью, ни частично ни копировать, ни воспроизводить ни письменные, ни иллюстративные материалы, как и не могут распространять их в какой бы то ни было форме.

Заявление о товарных знаках:

Все товарные знаки принадлежат компании SHENZHEN XIANGYING TECHNOLOGY CO., LTD.

Примечание:

В связи с обновлением устройства или по другим причинам это Краткое руководство будет регулярно обновляться. Если не указано иное, данный документ предоставляется только как руководство по эксплуатации. Никакие заявления, сведения и рекомендации, содержащиеся в настоящем документе, не являются гарантиями, будь то явными или подразумеваемыми.

Изготовитель: SHENZHEN XIANGYING TECHNOLOGY CO., LTD.

Адрес: The first and second floors of Zhongyuntai Technology Industrial Plant in Tangtou Community, Shiyan Street, Bao'an District, Shenzhen, 518108, China

СДЕЛАНО В КИТАЕ